


OH-6 Cayuse

TO 00-105E-9

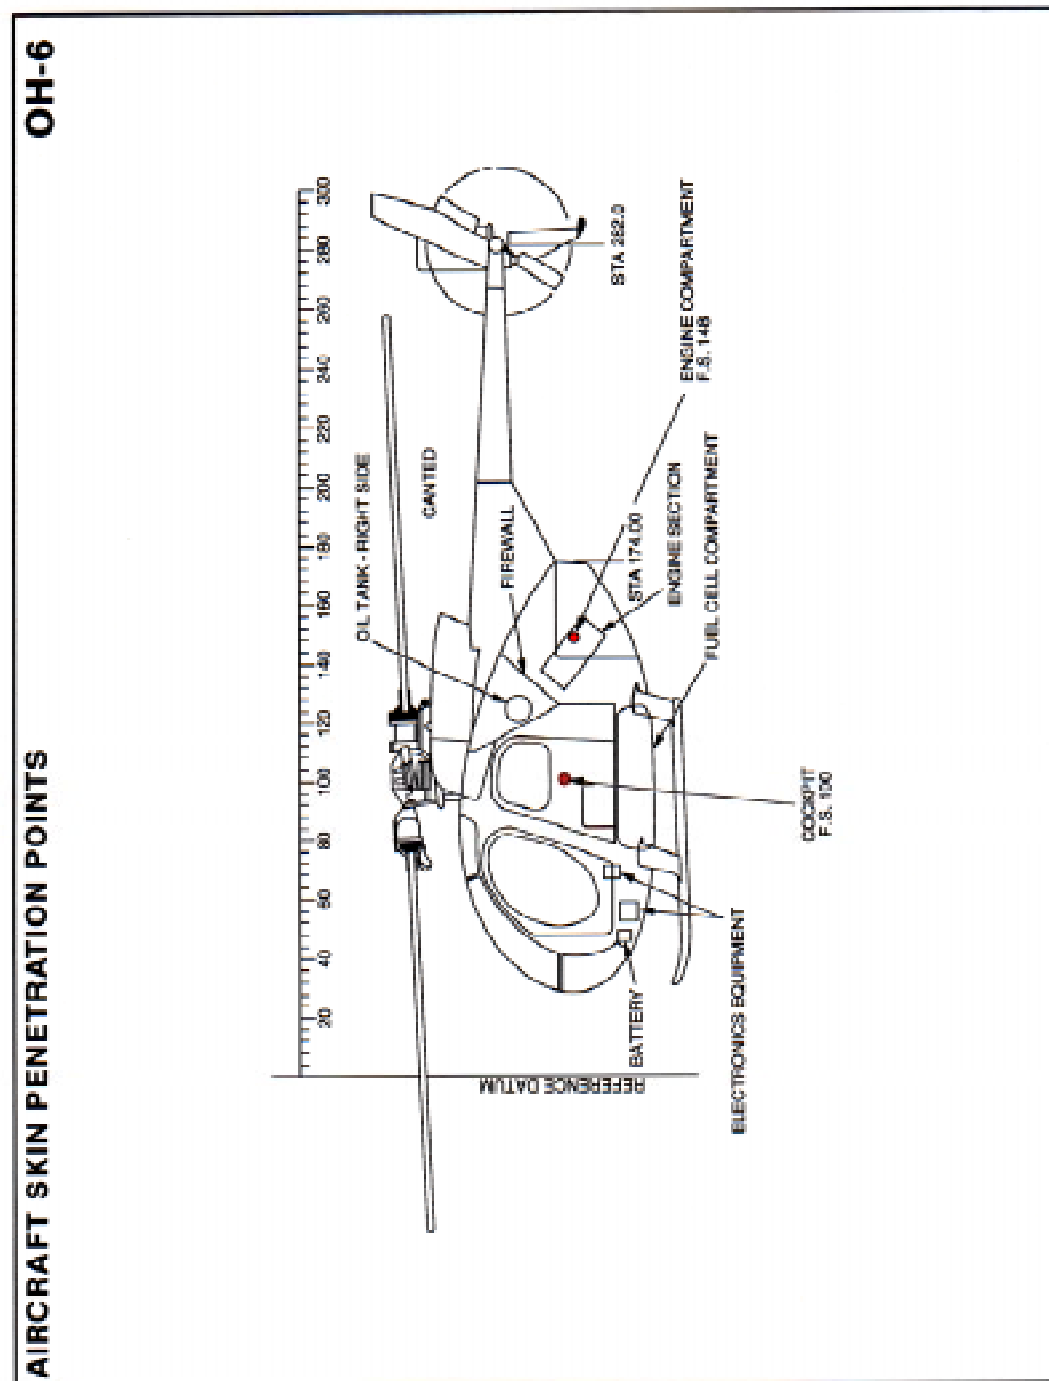

SPECIAL TOOLS/EQUIPMENT
Power Rescue Saw
Crash Axe

AIRCRAFT ENTRY ALL MODELS

1. NORMAL/EMERGENCY ENTRY

WARNING



Any rotation of gun barrels will cause gun to fire.

NOTE:
Four doors are located two on each side of fuselage. Entry procedures are basically identical for each door.

- a. Rotate external door release handle and open door.
- b. If external release handle does not open door, leave handle in open position, break door window, and pull internal door jettison handle to disengage hinge pins.

2. CUT-IN

- a. Cut cabin enclosure as required.

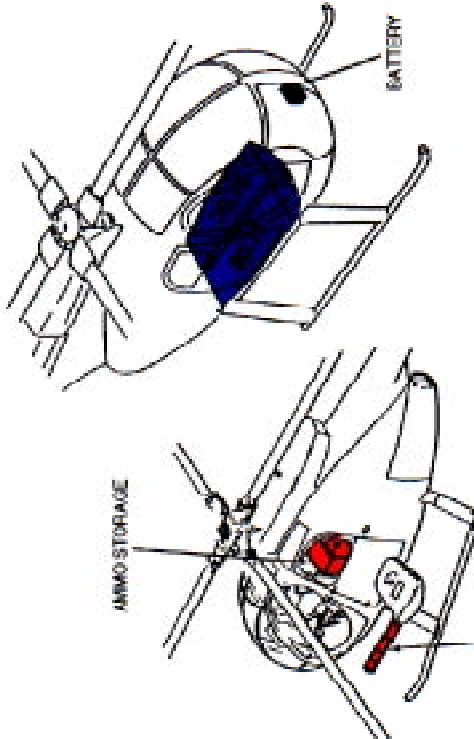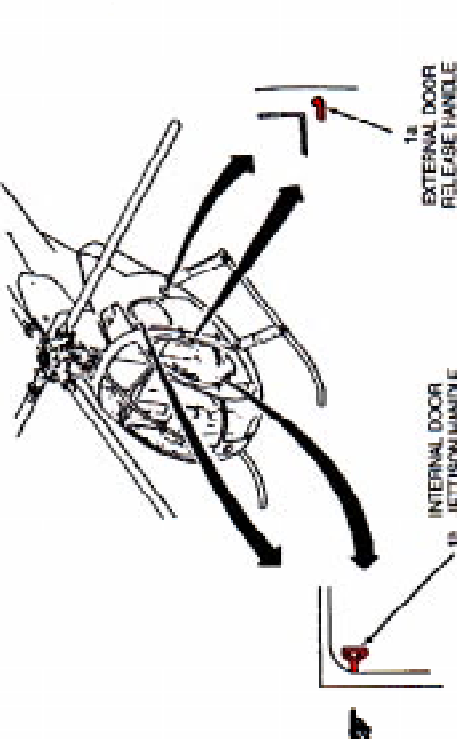OH-6

TO 00-105E-9

ENGINE SHUTDOWN AND AIRCREW EXTRACTION


OH-6

1. ENGINE SHUTDOWN



- a. Rotate throttle control, located on pilot and co-pilot collective levers, to FUEL CUTOFF position.
- b. Place battery switch, located on electrical control console, to OFF position.

2. AIRCREW EXTRACTION

- a. Unlatch lap belt and remove shoulder harness from crewmember(s).

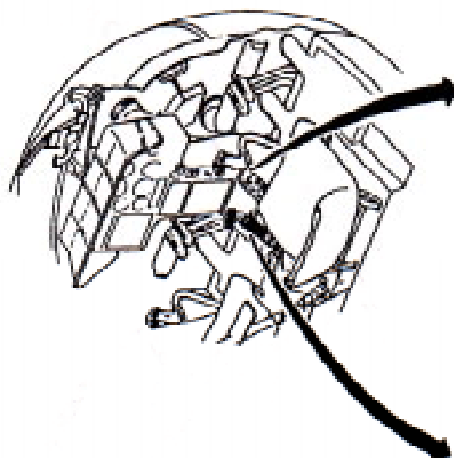


ELECTRICAL CONTROL CONSOLE

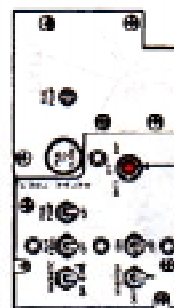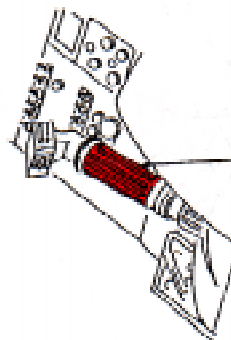
1b
BATTERY SWITCH-OFF1a
THROTTLE- FUEL CUTOFF

OH-58 Kiowa

TO 00-105E-9

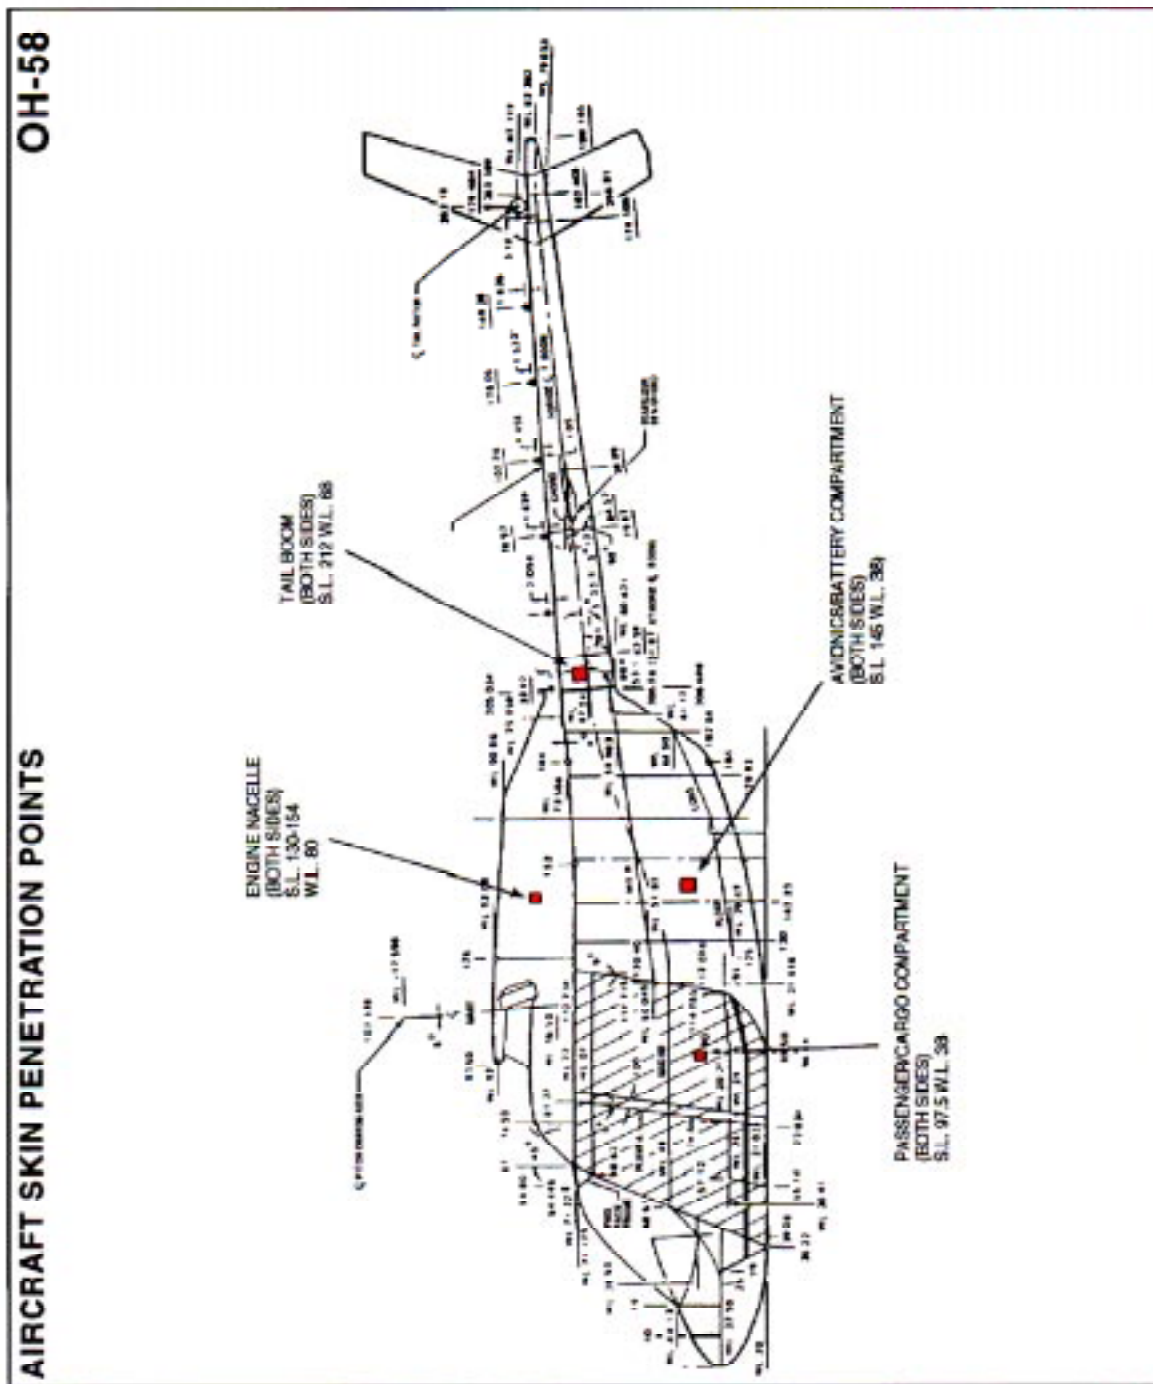

TO 00-105E-9

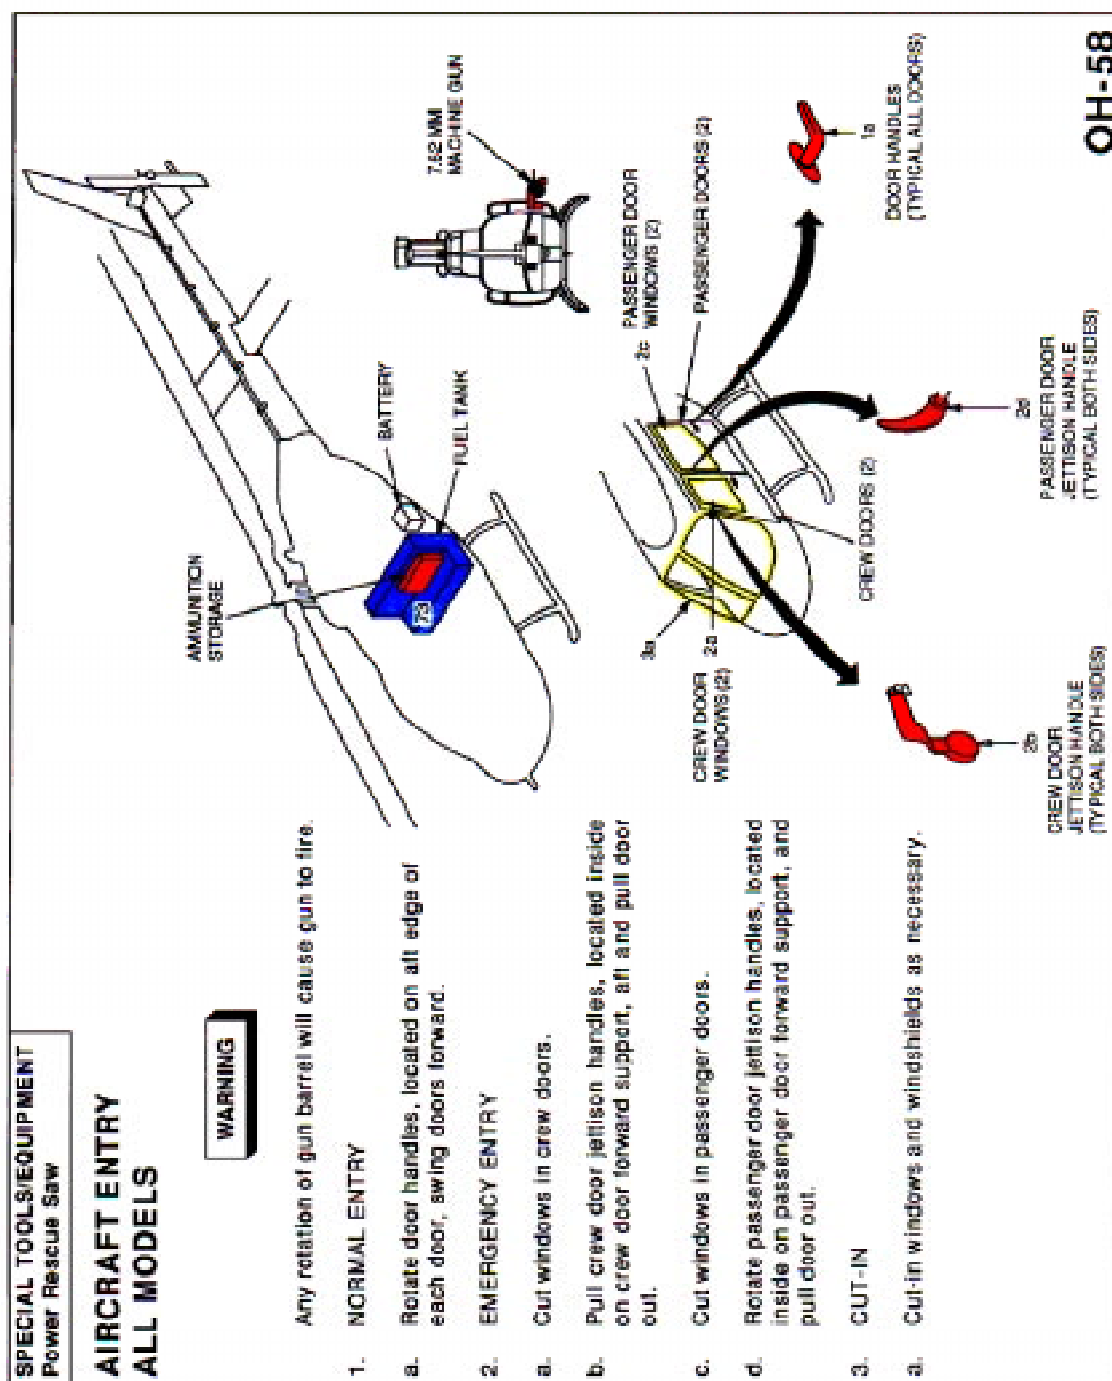

13-27

TO 00-105E-9

85-HO


ENGINE SHUTDOWN AND AIRCREW EXTRACTION

1. ENGINE SHUTDOWN

- Rotate throttle, located on pilot's collective pitch stick, to OFF position.
- Pull fuel shutoff valve, located overhead in crew compartment, aft to OFF position.
- Place battery switch, located on overhead switch panel, in OFF position.


2. AIRCREW EXTRACTION


- a. Unlatch lap belts and remove shoulder harness from crewmember(s).

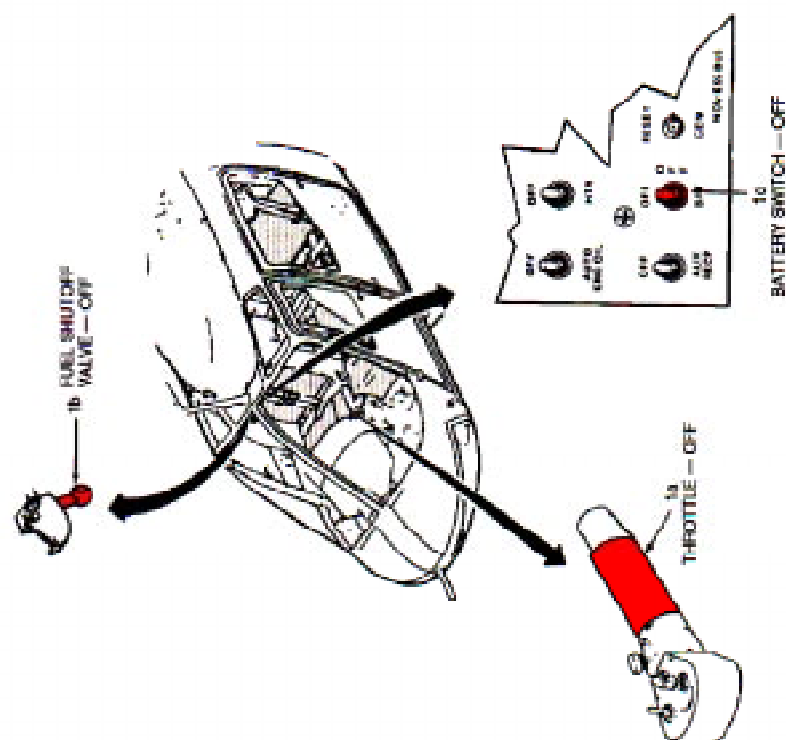

UH-1 Iroquois

TO 00-105E-9

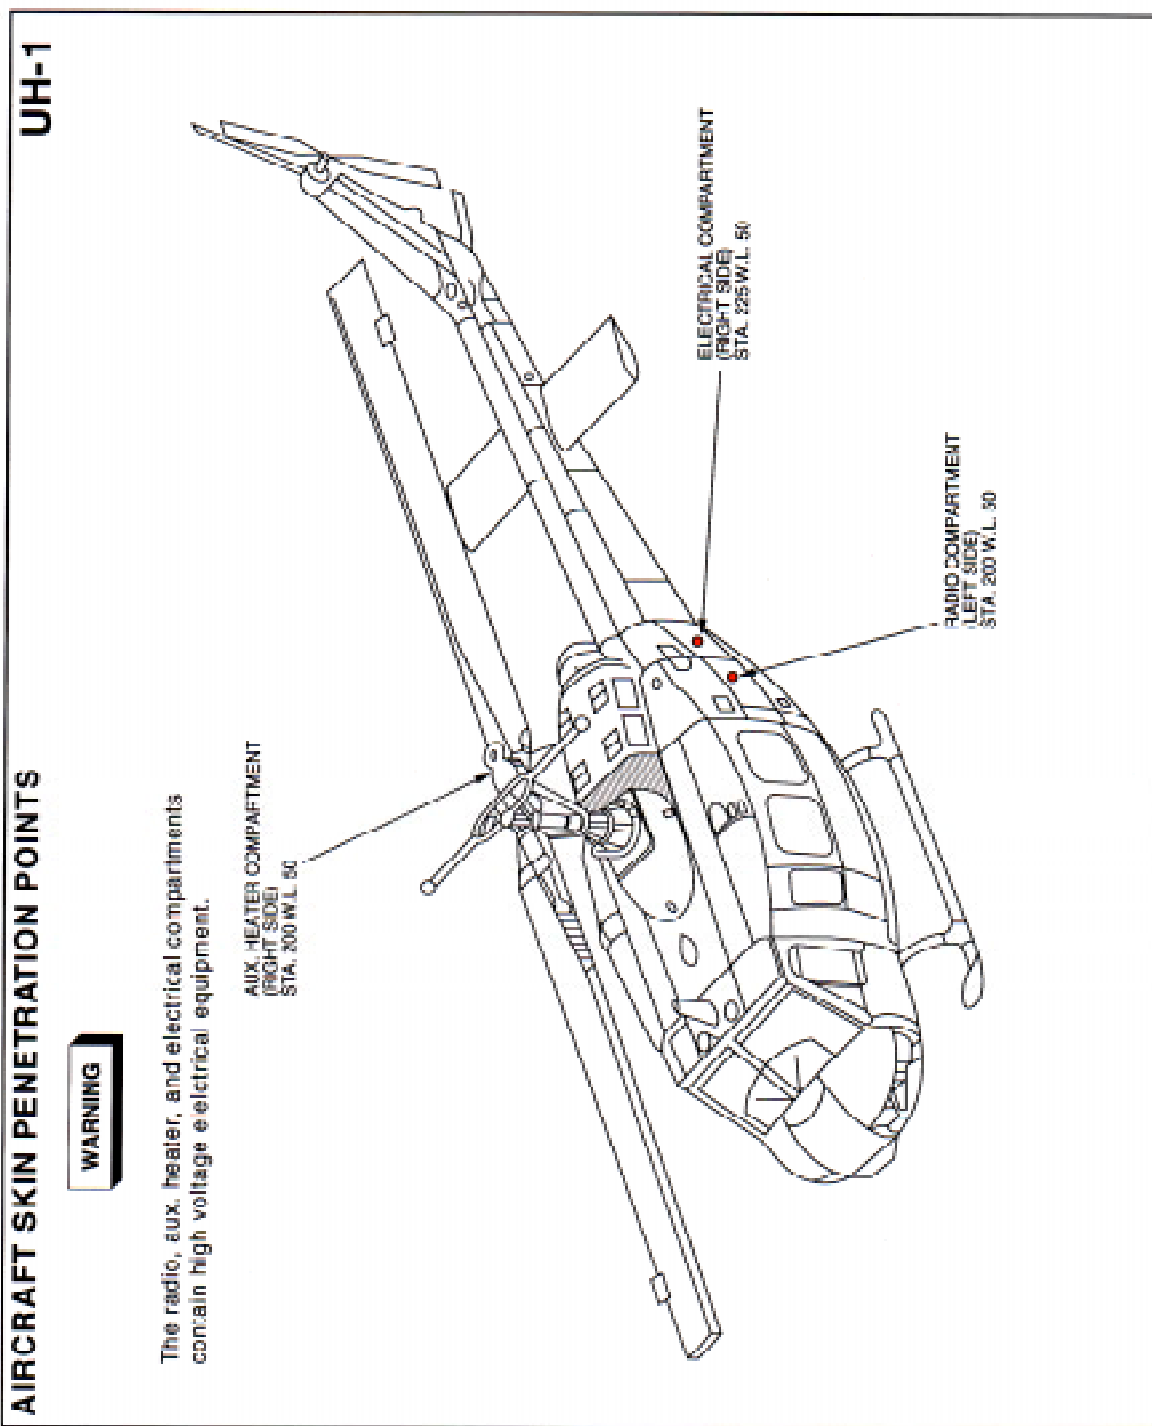

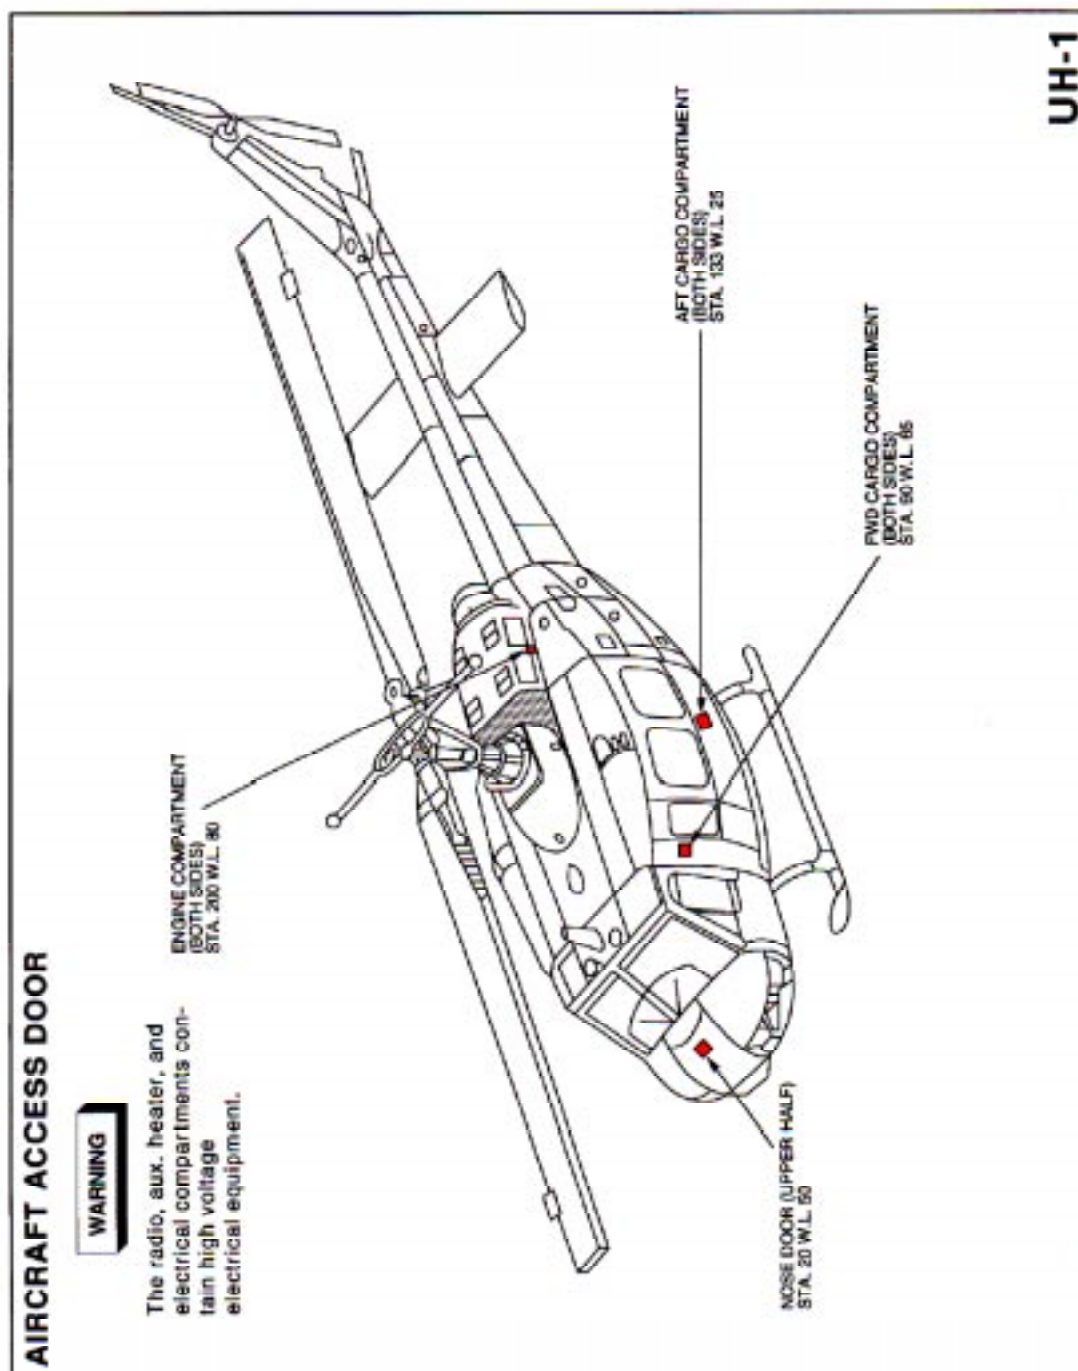

TO 00-105E-9

SPECIAL TOOLS/EQUIPMENT
Power Rescue Saw

NOTE:
UH-1N and HH-1H fuel tank differences:

UH-1N - Has aft auxiliary fuel tanks.
HH-1H - Has fwd auxiliary fuel tanks.
Seals have left and right bay fuel tanks for ferry missions.
HH-1H - Has 3 fuel cells across fuselage - 205 gal. total.
2 fuel cells below cabin floor - 305 gal. total.

UH-1

WARNING

Caution must be exercised when entering rotor blade area. Entry must be from side of aircraft.

1. **NORMAL ENTRY**
 - a. Rotate crew door handle, located left and right forward fuselage, down to unlatch door. Pull out and forward to open position.
 - b. Rotate passenger-cargo door handle, located left and right fuselage, down to unlatch and release door. Slide door aft to open position.
2. **EMERGENCY ENTRY**
 - a. Slide, break or cut crew door window, located left and right forward fuselage.
 - b. Pull jettison handles, located forward of right and left crew door frames, aft to jettison doors.
 - c. Pull doors outward.
3. **CUT-IN**
 - a. Cut windows and windshield to gain entry.

ENGINE SHUTDOWN AND AIRCREW EXTRACTION

1. ENGINE SHUTDOWN
 - a. Pull fire pull T-handles, located upper center instrument panel. (UH-1N only)
 - b. Place fuel switches, located on pedestal console, to OFF position.

WARNING

Do not apply rotor brake above 130 RPM. Doing so could cause brake disc failure resulting in uncontrolled movement of the aircraft or disintegration of the brake disc. Application of the rotor brake when the aircraft is on ice may also result in uncontrolled movement.

- c. Apply rotor brake (if installed), located overhead on right side of cabin roof, down and forward to lock.
- d. Turn battery switch to OFF position.

2. AIRCREW EXTRACTION

NOTE: Aircrew seats are equipped with shoulder harness and lap belts. Troop seats are equipped with lap belts only.

- a. Unlatch lap belts and remove shoulder harness from crewmembers.
- b. Unlatch lap belts from passengers (if applicable).

UH-1